

# FUEL SYSTEM

## MAIN PAGE




Reset menu .



Push RESET and hold the button so it turns red to reset the counters.  
Press 2 sec to reset the trip counter, and press 10 sec. to reset the total counter.

Trend ME

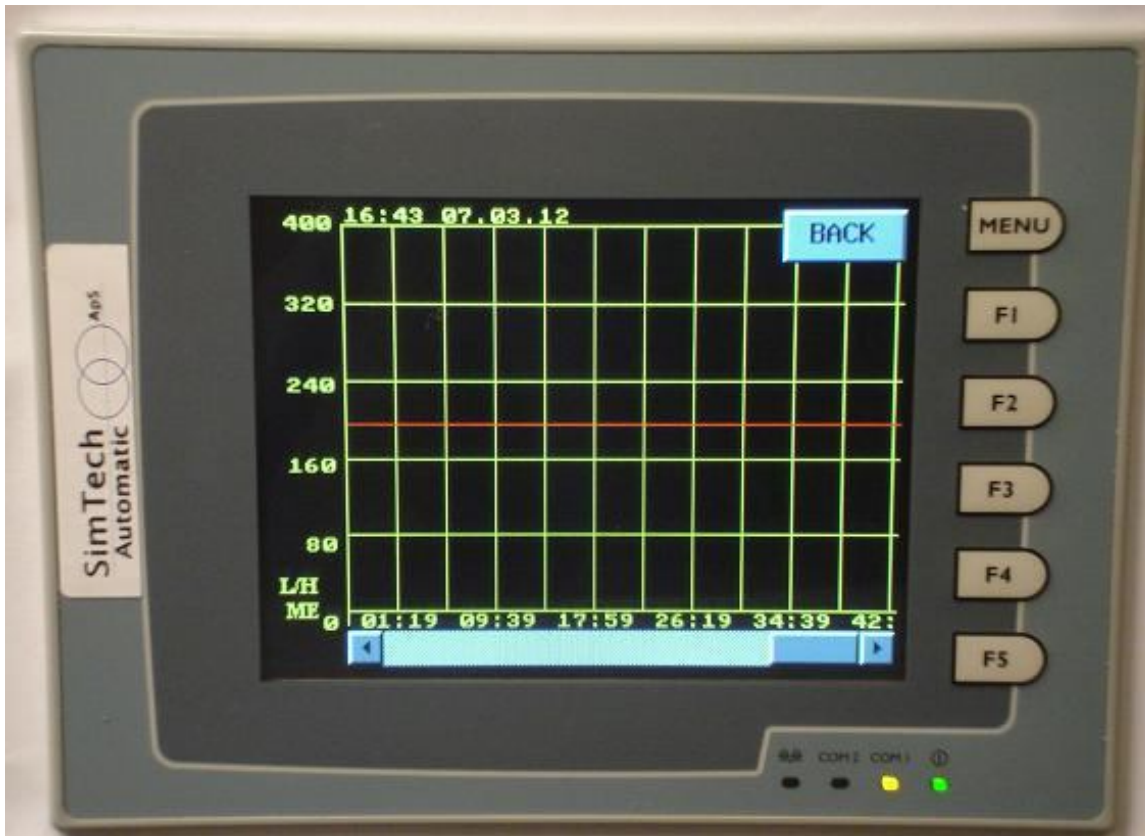

Trend Aux. Engine



ME counter.



Aux. Engine counter.



# NMEA to PC

